


Make your home a no fly zone

Fly Screens International Measuring instructions

Flyscreens International recommends that you read the following information before buying the following products

- Spa 20
- Spa 200
- Regent
- Manor
- Portland
- Pollen

To measure for the Insect/ Fly Screens measure the height(H) and width(W) of the window or door, measure up the edge of the frame or up to the brick work to ensure that the flyscreens is covering the whole window and the flyscreen frame has some where secure to be fixed against securely.

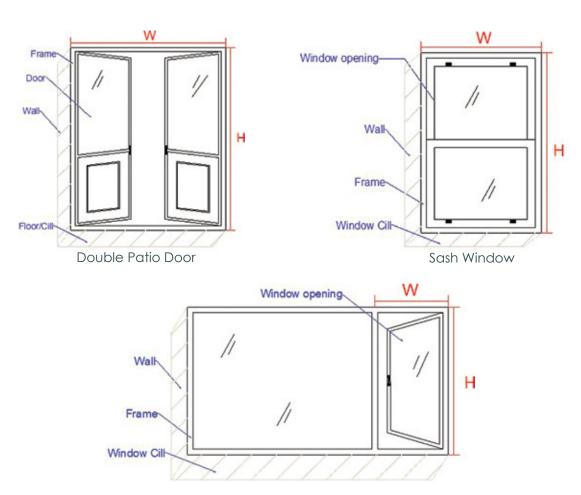



NOTE:- the 'Spa 20' and 'Spa 200' Screen rail is 40 mm. Check to make sure it does not interfere with anything (ie - window handles)

The main mechanism is 55mm in height and 40mm depth.



Make your home a no fly zone

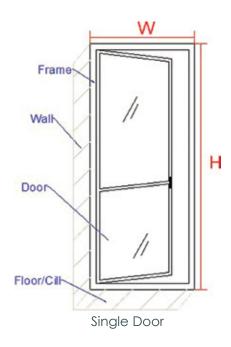

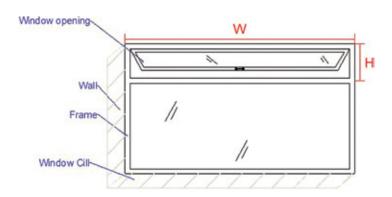

NOTE:- the 'Spa 20' and 'Spa 200' Screen rail is 40 mm. Check to make sure it does not interfere with anything (ie - window handles)

The main mechanism is 55mm in height and 40mm depth.

